


## PURPOSE



## ASSEMBLY INSTRUCTION

MODEL: PAV-FIX-L

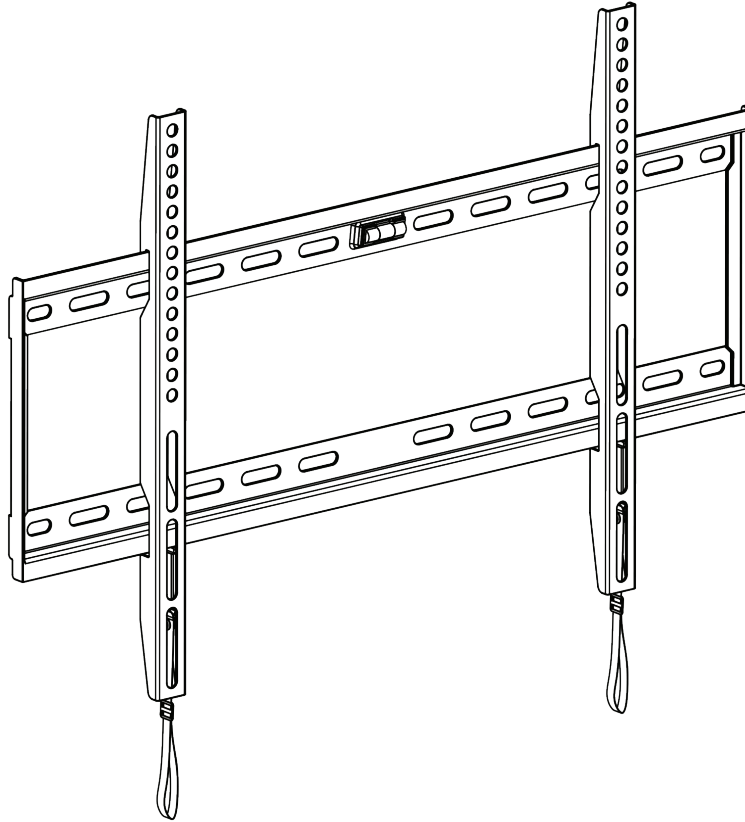

PURPOSEAV™ - FIXED UNIVERSAL MOUNT FOR 32-84" SIZED DISPLAYS



### CAUTION

- Read and understand these instruction in their entirety prior to installation
- This mount supports 32-84" displays, up to VESA 600 x 400
- Maximum weight capacity: 180 lb (82 kg)
- Ensure that the mounting wall will safely support up to 4 times the total weight of the mount and display
- Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories causing possible injury
- Installation by a qualified professional is highly recommended
- PurposeAV™ does not accept responsibility for incorrect installations



100% PERFORMANCE  
GUARANTEE



DAILY IN-STOCK  
PROMISE



SEAMLESS  
SUPPORT




10 YEAR  
WARRANTY



GIVES BACK  
TO CHARITY

## PACKAGE CONTENTS:

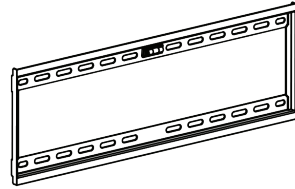



 
 







A-Wall plate  
1pc


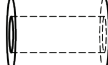


 



B-Bracket  
2pcs
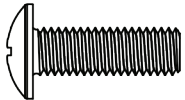
## HARDWARE LIST:

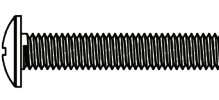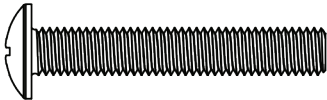					
H--Lag bolt 4pcs	I--Anchor 4pcs	J--M8 washer 4pcs	a--M4X12 bolt 4pcs	b--M5X12 bolt 4pcs	c--M6X12 bolt 4pcs

				
d--M8X25 bolt 4pcs	e--M4X30 bolt 4pcs	f--M5X30 bolt 4pcs	g--M6X35 bolt 4pcs	h--M8X50 bolt 4pcs

					
i--M5/M6 spacer 4pcs	j--M8 spacer 4pcs	k--M5/M4 washer 4pcs	l--M6 washer 4pcs	m--10mm spacer 4pcs	n--2.5mm spacer 8pcs

## REQUIRED TOOLS:

- Power Drill
- 2/5, 3/8", 7/32" drill bit
- Philips Head Screw Driver
- Socket Wrench
- Level
- Stud Finder

## ⚠ CAUTION :

### SAFETY WARNING:

Never let children climb on product or play with product.

Do not sit or stand on product.

Do not fasten a TV that is heavier than the recommended load rating to the mount.

Using suitable concrete wall or wood stud wall.

Improper installation may cause property damage and/or personal injury, so the installation must be done by two qualified contractors. The manufacture is not liable for damage or injury caused by incorrect mounting, assembly or use.

Improper handling can result in cuts and lacerations.

Pictures for reference only, subject to our available products.

Keep this instruction for future reference.

**⚠ CAUTION :** This mount is intended for use with weights not exceeding "maximum weight capacity 66lbs." The wall itself has to be capable of supporting 4X standard weight. Pls don't over tighten screws in order to avoid any injury. Use with products heavier than the maximum weights indicated may result in collapse of the mount and its accessories causing possible injury.

# INSTALLATION

## STEP 1: MOUNT WALL PLATE

### Mounting on a Stud Wall (2 adjacent studs)

- Locate the center of the studs using a stud finder and mark 4 holes
- Pre-drill top and bottom holes into the wood studs with a 7/32" drill bit to a depth of 2.5"
- Fix the wall plate by using the lag bolt screws (H) and washers (J) (Figure 1)

### WARNING



Wood stud must be a minimum size of 2x4 inches. Lag bolts must be in the center of the stud. Do not over tighten lag bolts.



### Mounting on a Concrete Wall

- Pre-drill 4 holes into the concrete using 3/8" drill bit to a depth of 2.5"
- Insert anchor (I) into each of the holes. Tap until flush with concrete surface
- Fix the wall plate by using the lag bolt screws (H) and washers (J) (Figure 2)

### WARNING



Do not drill into mortar joints. Concrete must be a minimum of 2000 psi density in order to hold anchor. Ensure that the anchor is flush with concrete surface even if there is another layer of material. If layer of material is over 3/8", custom thicker lag bolts must be used. Do not over tighten lag bolts.

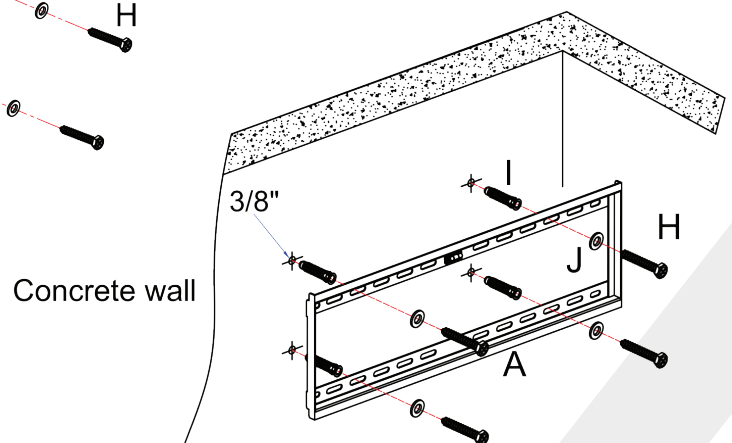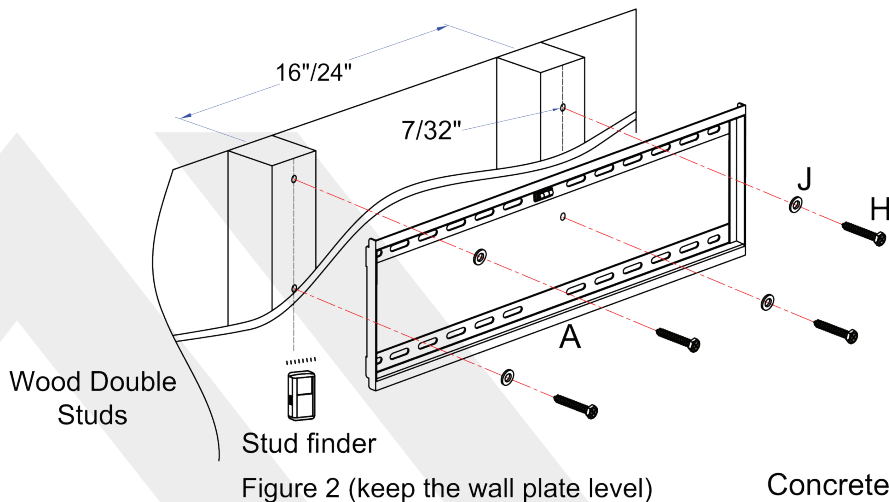

# INSTALLATION

## STEP 2: MOUNT ARMS TO DISPLAY

- Determine the correct screw size diameter for your TV mounting holes. Hand-thread one into the hole to determine the appropriate part to use. Stop if there is any resistance
- Thread screws into the washer -> arm -> spacer -> TV

### WARNING



Using incorrect bolts may damage your TV. Ensure arms lie flat and square to the TV.


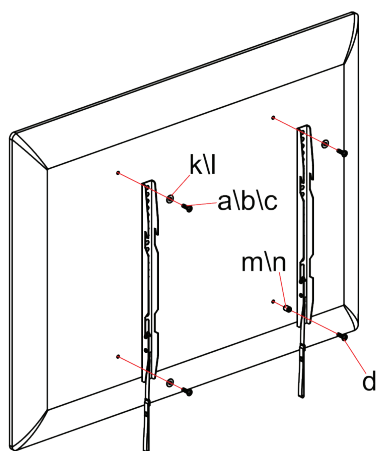


Figure 3

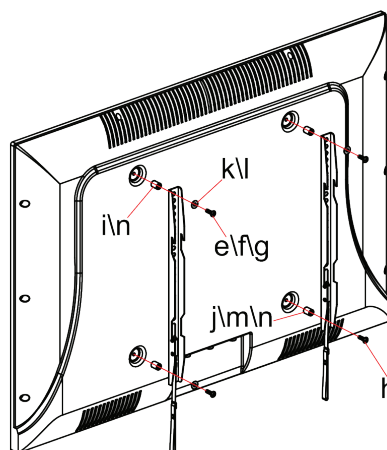

# INSTALLATION

## STEP 3: HANG DISPLAY ON WALL PLATE

- Lift the TV to hook the arms over the top of the wall plate so that it rests comfortably on the wall plate
- Push the bottom of the display in towards the wall. Spring loaded pull tabs will retract and allow for the arms to “click” into place. To remove the display, simply pull on the tabs to release the locking mechanism



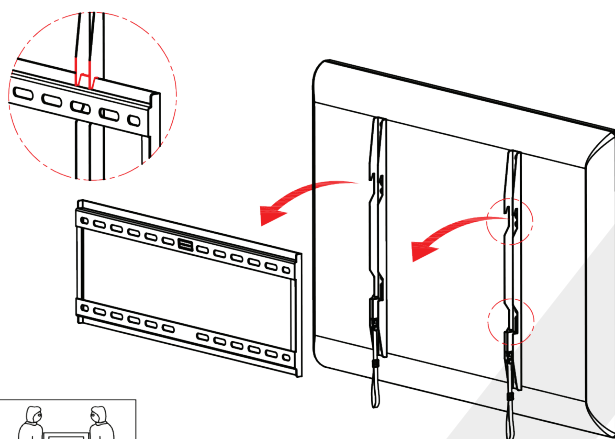


Figure 4

### WARNING

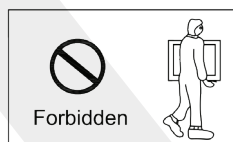

Take caution when lifting the display onto the wall plate.

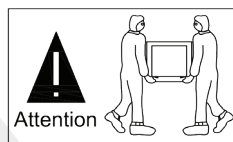

PAY EXTRA CARE AND ATTENTION WHEN YOU FASTEN TWO TV MOUNTS TO THE BACK PANEL OF TV IN STEP2. MAKE SURE THE APPROPRIATE MOUNT HARDWARE IS BEING USED PROPERLY.

1. Select correct Mounting Hardware according to the screw hole size of your TV, discard any remaining screws or spacers.
2. Carefully lay your TV on its face on a non-abrasivesurface, making sure to lay padding underneath it so as not to damage the screen.
3. Place left TV mount and right mount in the appropriate position, making sure CENTERED on the back of the TV and LEVEL with on another.
4. This product only install on the perpendicular wall, not install on the ceiling.