

Tech Tip


Using Numeric IR with CAA66 Controller

Numeric IR use with the CAA66 requires the optional KPSC keypad (connected to either a KP6 or KPL keypad) to add source control and numeric capability. The Numeric button is pressed to shift buttons to numeric control or entry. This also issues the "Prefix" command. A second Numeric button press (or a 3-second time out) issues the "Suffix" command.

Default settings are "Disc" as Prefix and "Enter" as Suffix. These CANNOT be changed and MUST be learned in using the Disc and Enter buttons on the SRC1 remote control.

Note: There is NO macro capability with the CAA66. There can only be a single command each for the Prefix and Suffix when using Numeric IR.

Many source components' Disc and Enter commands will be loaded using the device code. The Learn IR command type procedure is used to learn in source control commands when a source component is not listed in the UEI Device Code Library or when not all keycodes are assigned from that library.

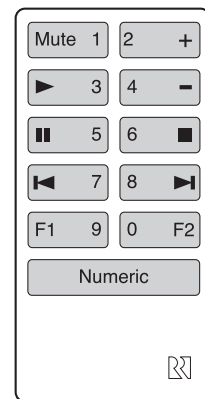

KPSC Keypad


Learn IR procedure for
Multi-disc Changer
that requires a Prefix
and Suffix command:

1. Press Source Setup button to enter Source Setup Menu.
2. Enter source # to be configured.
3. Enter 99 from SRC1 remote control to choose Learn IR.
4. Press button to learn (play, pause, 1, 2, etc.) using SRC1.
5. Aim OEM remote at IR window and press same button as above.
6. Press "Disc" on SRC1 to learn in the Prefix command.
7. Press desired command (e.g., Disc) on OEM remote for Prefix.
8. Press "Enter" on SRC1 to learn in the Suffix command.
9. Press desired command (e.g., Enter) on OEM remote for Suffix.

Example using Sony
400 Disc Changer:

1. Press Source Setup button to enter Source Setup Menu.
2. Enter source # for Sony disc changer.
3. Enter 10 for source template.
4. Enter 0000 for device code.
5. Press Source Setup button to re-enter Source Setup Menu.
6. Select same source number as above.
7. Enter 99 to choose Learn IR.
8. Press "Enter" on SRC1 to learn in the Suffix command.
9. Press "Enter" on Sony remote.

Note: Sony's Device Code 0000 has all commands except "Enter." By learning "Enter" you can now perform Numeric IR using the Numeric button to send "Disc" for the Prefix and "Enter" for the Suffix.

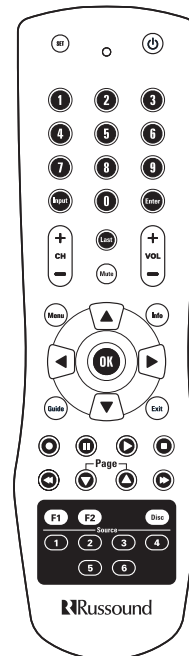

SRC1 Remote Control